

WIRELESS SET TOP BOX SETUP

- You will have two cords, one that goes to the TV, and one that plugs into the electrical outlet. The first time a cable box is plugged in it can take 10-15 minutes to boot-up.
- Once a message comes up on the TV screen that says “press okay to connect”, with a hand pointed down to “connect”, the wireless box is now ready to sync into the wireless network.

You will have a tall gray or black tower (12” tall) with flashing, green lights or a small tower (5.5” tall) with either “Arris” or “M” on the front. The device you have will determine which steps you follow next.

TALL TOWER

- Once the TV screen says **PRESS OKAY TO CONNECT**, go to the tower and press the **WPS** button 3 times (button will be located below all the flashing green lights).
- After **WPS** button is pressed, you will have 2 minutes to complete step 3.
- Now go back to the cable box and press the **OK** button on the cable box itself (not with the remote).
- After about 1 minute, you’ll see a bright colored screen. 2-4 minutes after that the picture will show up.

SMALL TOWER

- Once the TV says **PRESS OKAY TO CONNECT**, go to the small tower and press and hold the **WPS** button for 3 seconds.
- After **WPS** button is pressed, You will have 2 minutes to complete step 3.
- Now go back to the cable box and press the **OK** button on the box itself (not with the remote).
- After about 1 minute, you’ll see a bright colored screen. 2-4 minutes after that the picture will show up.

**If this process does not work, you must start process over.
Begin by unplugging the power cord from the cable box and plugging it back in.
Repeat steps again, could take 2-3 times.**